



Email : sales@scilabexport.com


Phone: +91-7082934803

Product Name :

Mains Ref & Frz

Product Code :

SLE/CCE/013

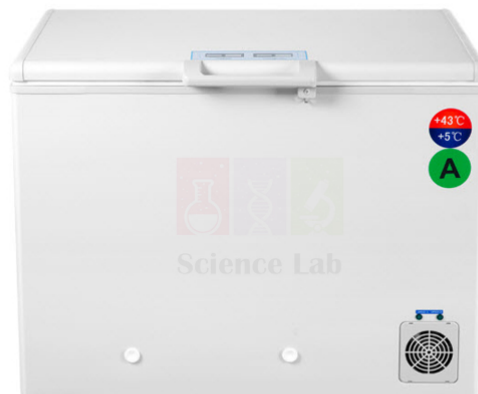

Website: <https://scilabexport.com>, **Email:** sales@scilabexport.com

1226/1-5, Bengali Mohalla, Science Market | 133001, Haryana



Email : sales@scilabexport.com

Phone: +91-7082934803

Description :

Mains Ref & Frz (Product Code: SLE/CCE/013) is a mains-powered combined vaccine refrigerator and water-pack freezer used at grid-connected health facilities that store vaccines and prepare frozen packs for outreach. It runs on 220-240V 50Hz, offers 30 litres of net vaccine storage, and freezes 4 kg of water-packs per 24 hours with 16 kg of pack storage. It is supplied by **Jain Scientific Equipments Pvt Ltd (ScienceLab)**, Ambala, India, for programme orders and laboratory equipment tenders in India.

Specifications

Parameter	Detail
Power requirement	220-240V 50Hz
Refrigerant	R600a
Ambient operating temperature	Min. +5°C, max. +43°C
Freeze protection	Grade A
Vaccine storage volume category	≥30 L and <60 L
Net vaccine storage volume	30 litres
Water-pack freezing capacity	4 kg per 24 hours
Water-pack storage capacity	16 kg
Documentation	User, installation and maintenance documents in English as standard, addressing all five aspects set out in the applicable specification
Product code	SLE/CCE/013
Supplied by	Jain Scientific Equipments Pvt Ltd (ScienceLab), Ambala, India

What Is the Mains Ref & Frz Used For?

Where a clinic has a working grid connection, a mains appliance is usually the simpler choice than a solar system. The Mains Ref & Frz gives such a clinic two functions in one cabinet: a 30-litre vaccine section for routine stock and a freezer section that turns out 4 kg of frozen water-packs every 24 hours, with space to keep 16 kg in reserve for carriers and cold boxes.

Because it depends on 220-240V 50Hz mains, the supply quality at the site matters. Many facilities fit a voltage stabiliser and keep a record of power cuts; discuss these with your electrician before installation. Keep the unit within +5°C to +43°C room temperature, and use the maintenance documents for routine cleaning and checks.

What to S

- Numb
- Confir

Website: <https://scilabexport.com>, **Email:** sales@scilabexport.com

1226/1-5, Bengali Mohalla, Science Market | 133001, Haryana



Email : sales@scilabexport.com

Phone: +91-7082934803